




## 1. CONNECTING THE COMPUTER TO YOUR TELEVISION

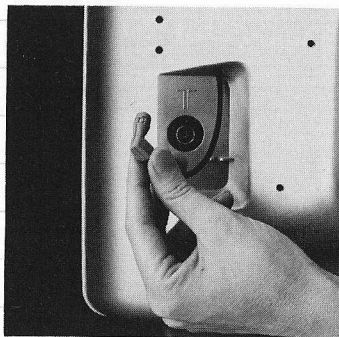

Disconnect the television antenna from the antenna socket on the back of your television set.

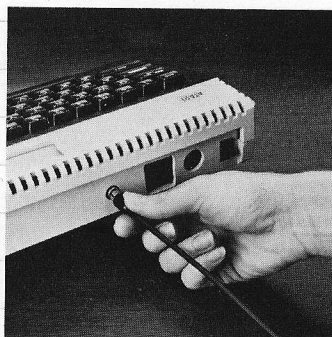


Connect one end of the RF Cable to the socket marked "television" on the back of the computer.

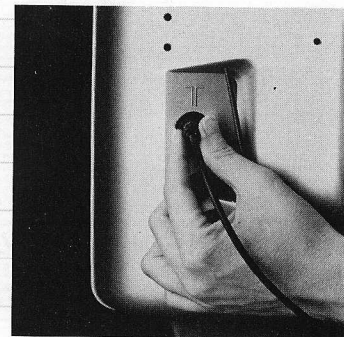

Connect the other end of the RF Cable to the antenna socket on the back of your television set.


## 2. CONNECTING THE COMPUTER TO YOUR VIDEO MONITOR

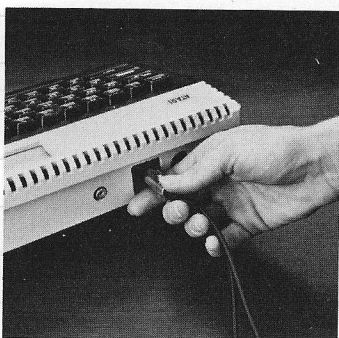

Connect one end of the monitor cable 5-pin plug (not included with Purchase) to the socket marked "monitor" on the back of the computer.

Connect the other end of the monitor cable to the monitor according to the instructions provided with your monitor.

## 3. CONNECTING THE COMPUTER POWER SUPPLY

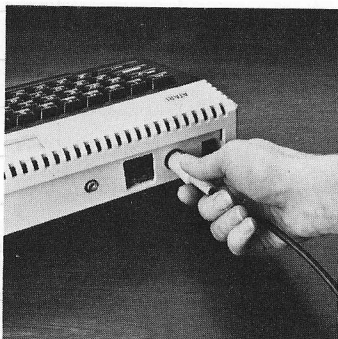

Connect plug from power adapter to electrical outlet.

Connect round 7-pin plug into the "power-in" socket on the back of the computer.

**4.** Turn on your television and tune it to channel 36 (United Kingdom), channel 4 (Germany), or appropriate station as indicated by your ATARI Computer dealer.

**5.** Switch "on" power located on the right side of the back of the computer console.

A few seconds later the word "Ready" will appear on the television screen.

**6.** If you leave the computer on one display long enough, the colors on your TV screen begin changing periodically. This is normal and occurs to protect your TV set. Please note that when you turn off the computer, you must wait 3 to 5 seconds before turning it back on.