



Config:  
 3-4 = Cartridge enable  
 1-2 = Flash write enable. Active if closed.

B1 to B9 are solder pads for configuration.  
 For 32K x 8 Ram. Connect B2 and B3. Default.  
 Connect B5 and B6, also default.  
 B7 to B9 don't care.  
 Only usable for Freezer and Cartridge function.

For 128K x 8 Ram. Freezer and Cartridge function.  
 Connect B5 and B6. Also default.  
 Connect B8 and B9. Default as well.  
 Ramdisk function.  
 Connect B4 and B5, cut B5 - B6 trace.

For 512K x 8 Ram. Freezer and cartridge function. 128K usable.  
 Connect B2 and B3. Default.  
 Connect B5 and B6, also default.  
 Connect B8 and B9, default as well.

Ramdisk and Cartridge function. 512K usable.  
 Connect B1 and B2. Cut trace between B2 and B3.  
 Connect B4 and B5, cut B5 - B6 trace.  
 Connect B8 and B9, cut B7 - B8 trace.

For Ramdisk / Cartridge and 512K, special PLD contents needed!  
 Freezer / Cartridge / Ramdisk and 32K or 128K, same PLD.

www.abbuc.de

Property of Atari Bit Buyer User Club			
Project : Freezer 4 XE	Rev : 4	Sub 3	
Subname : Atari 8 bit	Date : 21-Nov-2005		
Hardware Engineer : Matthias Rejch			
CAD Engineer : Guus Assmann			
Company : ABBUC			
Address : Beisiggenbeck 45			
City : Herten			
State : Germany			
Initial date Sept 2004	Page : 1	of : 1	